


DROP



x 6

x 6



Made in Estonia, EU

製造元

HUUM OÜ

Vahi tee 9, Tartumaa
60534, Estonia


販売元:

HUUMジャパン合同会社

info@huum.jp

huum.jp

#huumsauna

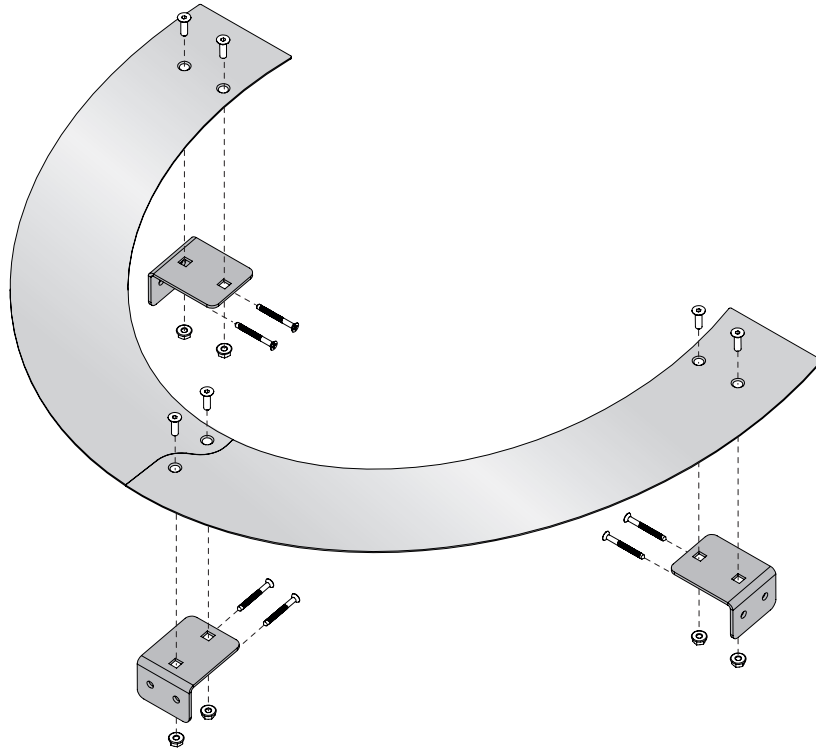

♥ OF SAUNA


Tutorial
video



EN Embedding Flange

- Place the plates of embedding flange on the desired place of the boarding. Make sure that the end edges of the embedding flange are against the wall.
- Mark the inner edge of the embedding flange on the boarding of the sauna platform.
- Follow the marked line and draw the second contour 52 mm / 2 in outwards. We recommend using a 52 mm / 2 in wide wooden block for that purpose.
- Cut the wider contour by following the aperture.
- Attach the brackets of the embedding flange to the plates by using bolts and nuts.
- Install the embedding flange to the cut aperture, adjust the cut edge, if necessary.
- Attach the brackets to the boards of the platform with screws.
- You can now install the DROP heater. Follow the minimum height from the figure below:

Find the latest updates on our website
www.huum.jp

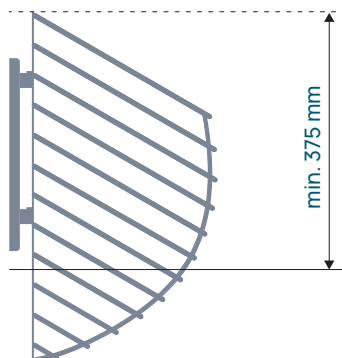

JP 埋め込みフランジ

- 板の希望の位置埋め込みフランジのプレートを設置します。埋め込みフランジの端部エッジが壁に当たることを確認してください。
- サウナ室の床の板に埋め込みフランジの内側エッジをマーキングします。
- マーキングの線に沿って、2つ目の輪郭を52 mm (2インチ) 外側に描きます。この作業には、52 mm (2インチ) 幅の木製ブロックの使用が推奨されます。
- 開口部に沿って、外側の輪郭を切断します。
- 埋め込みフランジのブラケットをボルトとナットでフランジに取り付けます。
- 埋め込みフランジを切断した開口部に設置します。必要に応じて、切断部のエッジを調整します。
- ブラケットをサウナ室の床の板のボードにねじで取り付けます。
- サウナ室の床からヒーターが375 mm以上出るように設置してください。

最新の情報については、以下の当社ウェブサイトをご覧ください。
www.huum.jp

